

## Unpacking

Please make sure the package contains the following items:



IP-Phone x 1



Stand x 1



Handset with cord x 1



Ethernet cable x 1

 


Quick guide x 1



Power Adapter x 1 (Optional)


## Product Overview

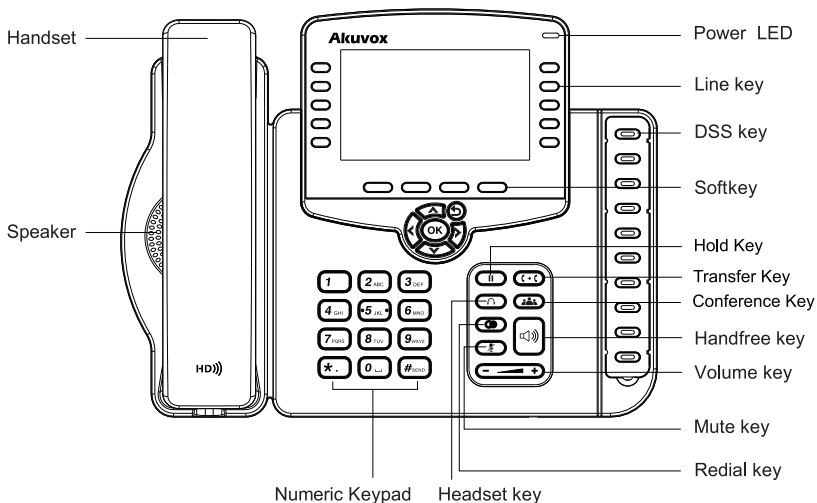


# Akuvox

## Basic Setup

 **Mounting:** Slide the short edges of the L-shaped stand (the prongs) into the phone's two rear slots (see below). Slide the prongs in until they are locked.

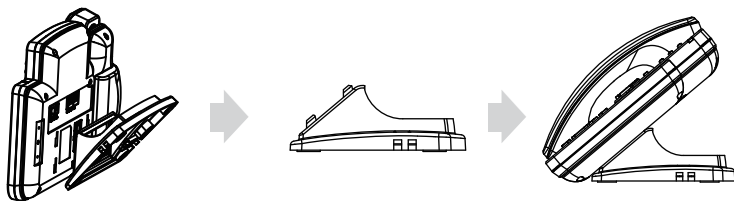


 Connect the handset and optional headset as shown below:

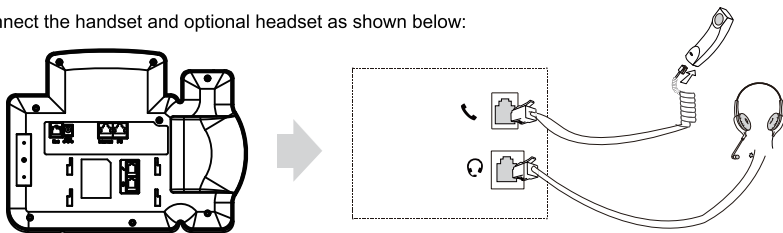

## Connect Network Cable and Power

 You can either connect the IP-Phone to the power adapter directly or a PoE (Power over Ethernet) compliant switch or hub. The IP-phone can also share the network connection with other network devices by using PC port. Connection is shown below:

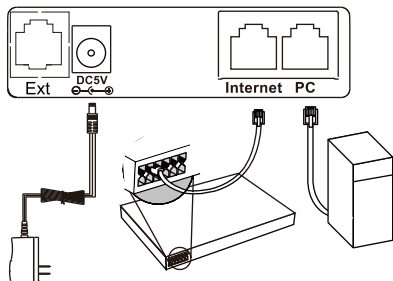

Note: If Power over Ethernet is being used, do not plug in the AC adapter.

# Quick Guide

## Configuration

1. After setting up the network and power, connect IP phone to your computer, then press **OK** button to check the IP address in the main menu. *( If you are using DHCP to obtain IP address )*
2. Launch web browser and type in the IP address to access web interface. Login with username and passwords(admin by default).
3. Register the device using your SIP account. *( Please refer to user manual for more information )*

## Operation


 
### Make a call

Pick up the handset, enter a phone number then press the **Send** softkey or # key to make a call.


### Redial

Press the Redial key  , select a dialed number then press the **Dial** softkey .

### Receive a call

- **During a call:** Press **Answer** softkey to accept a second call or press **Reject** softkey to reject it.
- **Idle state:**
  1. Pick up the handset
  2. Press **Answer** softkey
  3. Press Headset key 
  4. Press Handfree key 


### Mute a call

Press the mute key  ; To resume the conversation, press the mute key again.


### Hold a call

Press **Hold** softkey or Hold Key  to hold the current conversation.

### Voice mail

Press key  to check the voice mail, select an existed account then press **Conn** softkey to view voice message. *(To configure voice mail account, please refer to user manual)*

### 3-way conference call

During a conversation, press the **New** softkey to make a new call, after the third called party answers, press **Conf** softkey or Conference Key  to set up 3-way conference.

## Call Transfer














- **Blind Transfer:** Pick up a call, press the **Trans** softkey or Transfer Key **↵ ↵** to enter the target number, then press the **Trans** softkey or Transfer Key **↵ ↵** to transfer.
- **Consultative Transfer:** Pick up a call, press the **Trans** softkey or Transfer Key **↵ ↵** to enter the target number, then press the **OK** button to call the third party. After the phone rings or the call is answered, press **Trans** softkey or Transfer Key **↵ ↵**.

## Call Forward

Press Menu-> Features-> Call Forward for related settings:

- **Always Forward:** Enable always forward, input the number in **Forward To** then press **Save**. All the incoming calls will be forwarded to the specified number.
- **Busy Forward:** Enable busy forward, input the number in **Forward To** then press **Save**. The incoming call will be forwarded to the specified number if you reject the call.
- **No Answer Forward:** Enable no answer forward, input the number in **Forward To** then press **Save**. The incoming call will be forwarded to the specified number if the call rings for 30s(default) without answered.

## Status Information

Registered		Network disconnection	
Register failed		Ring off	
Registering		Headset mode	
Deactivated account		New voice message	
Forward		New text message	
Auto answer		Missed calls	
Do Not Disturb			

### Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website: <http://www.akuvox.com> © Copyright 2016 Akuvox Ltd. All rights reserved.



YS6700001