

Preface

The content of this section is designed to ensure that users use the product correctly to prevent dangers or property loss caused by improper operation. Before using this product, be sure to read this manual carefully. Please keep this manual properly for future reference.

About This Manual

- We recommend that you use this manual under the guidance of a professional.
- This manual is designed for use with multiple product models, and it is not possible to list the appearance and functions of each product individually. Please refer to the actual product for use.
- This manual is intended for multiple software versions, and the illustrations and descriptions in this manual may be different from the actual GUI and functions of the software.
- Despite our best efforts, technical or typographical errors may exist in this manual. Uniview cannot be held responsible for any such errors and reserves the right to change the manual without prior notice.
- Users are fully responsible for the damages and losses that arise due to improper operation.
- Uniview reserves the right to change any information in this manual without any prior or indication. Due to such reasons as product version upgrade or regulatory requirement of relevant regions, this manual will be periodically updated.
- This manual will be updated in real time according to the laws and regulations of the relevant region. For specific details, please refer to the product's paper copy, QR code, or official website. In case of any discrepancy between the paper copy and the electronic version, the electronic version shall prevail.

About This Product

If the product you have chosen is a video product, please strictly adhere to the applicable laws and regulations. You can visit our official website to inquire about the relevant content.

Instructions for Use

- This document serves as a guide for use only. All statements, information, and suggestions contained in this document do not constitute any express or implied warranty.
- We assume no responsibility for any special, incidental, consequential, or indirect damages resulting from the use of this manual or the use of our products, including but not limited to losses due to loss of business profits, data or document loss, and product malfunction or information leakage caused by cyber attack, hacker attack, and virus infections.
- Due to uncertain factors such as the physical environment, there may be discrepancies between the actual values of some data and the reference values provided in the manual. In case of any questions or disputes, the company's final interpretation shall prevail.

Formatting Conventions

The UI formatting conventions used in this document are as follows:

Format	Meaning
Bold	Bold means UI elements (button names, menu names, window names, etc.), e.g., Click Save .
>	Indicate a sequence of actions, e.g., click Device Management > Add Device , which means first click Device Management , and then click Add Device .

Symbol Conventions

This document uses various distinctive symbols to highlight areas that require special attention during the operation process. The meanings of these symbols are as follows



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd.Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in

Website : www.speedtechnology.in

Symbol	Meaning
	NOTE: Provides tips and additional information related to the operation and use of the product.
	CAUTION: Alerts to matters that require attention during operation, as improper handling may lead to product damage, data loss, or functional abnormalities.
	WARNING: The annotations following this symbol demand extra attention, as improper handling could potentially cause personal injury.

Legal Statement

Copyright Statement

©2021 Zhejiang Uniview Technologies., Co., Ltd. All rights reserved.

All parts of this document, including but not limited to text, images, and graphics, are copyrighted and belong to Zhejiang Uniview Technologies Co., Ltd. (hereinafter referred to as "we" "us").

Without our written permission, no organization or individual may excerpt, copy, translate, modify, or disseminate any part or all of the content of this manual in any form.

The products described in this manual may contain software copyrighted by any potential licensors. Without the permission of the relevant rights holders, no one may copy, distribute, modify, excerpt, decompile, disassemble, decrypt, reverse engineer, rent, transfer, sublicense, or engage in any other actions that infringe upon the software copyright in any form.

Trademark Acknowledgements

uniview

are trademarks or registered trademarks of Uniview.

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI (High Definition Multimedia Interface), HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

All other trademarks, products, services and companies in this manual or the product described in this manual are the property of their respective owners.

Export Compliance Statement

Uniview complies with applicable export control laws and regulations worldwide, including that of the People's Republic of China and the United States, and abides by relevant regulations relating to the export, re-export and transfer of hardware, software and technology. Regarding the product described in this manual, Uniview asks you to fully understand and strictly abide by the applicable export laws and regulations worldwide.

EU Authorised Representative

UNV Technology EUROPE B.V. Treubstraat 1, 2288 EG, Rijswijk, Netherlands.

If you have any feedback, please contact us@uniview.com.

Disclaimer of Liability

- ☐ We assume no responsibility and offer no compensation for any special, incidental, consequential, or indirect damages resulting from the use of this manual or our products, including but not limited to losses related to lost business profits, data, or document loss.
- ☐ The product described in this manual is provided on an "as is" basis. Unless required by applicable law, this manual is only for informational purpose, and all statements, information, and recommendations in this manual are presented without warranty of any kind, expressed or implied, including, but not limited to, merchantability, satisfaction with quality, fitness for a particular purpose, and noninfringement.



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd. Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in

Website : www.speedtechnology.in

- ☐ Users must assume total responsibility and all risks for connecting the product to the Internet, including, but not limited to, network attack, hacking, and virus. Uniview strongly recommends that users take all necessary measures to enhance the protection of network, device, data and personal information. Uniview disclaims any liability related thereto but will readily provide necessary security related support.
- ☐ To the extent not prohibited by applicable law, in no event will Uniview and its employees, licensors, subsidiary, affiliates be liable for results arising out of using or inability to use the product or service, including, not limited to, loss of profits and any other commercial damages or losses, loss of data, procurement of substitute goods or services; property damage, personal business interruption, loss of business information, or any special, direct, indirect, incidental, consequential, pecuniary, coverage, exemplary, subsidiary losses, however caused and on any theory of liability, whether in contract, strict liability or tort (including negligence or otherwise) in any way out of the use of the product, even if Uniview has been advised of the possibility of such damages (other than as may be required by applicable law in cases involving personal injury, incidental bodily injury damage).
- ☐ To the extent allowed by applicable law, in no event shall Uniview be liable to you for all damages for the product described in this manual (other than as may be required by applicable law in cases involving personal injury) or the amount of money that you have paid for the product.
- ☐ When using this product, please strictly adhere to the applicable laws and regulations to avoid infringing upon the rights of third parties, including but not limited to intellectual property, right of privacy, or other privacy rights. You must also not use this product for the purposes of developing or facilitating the use of weapons of mass destruction, biological or chemical weapons, nuclear weapons, or for any other purposes that violate international norms and regulations.

Privacy Protection Reminder

Uniview complies with appropriate privacy protection laws and is committed to protecting user privacy. You may want to read our full privacy policy at our website and get to know the ways we process your personal information. Please be aware, using the product described in this manual may involve the collection of personal information such as face, fingerprint, license plate number, email, phone number, GPS. Please abide by your local laws and regulations while using the product.

Safety Precautions

The device must be installed, serviced and maintained by a trained professional with necessary safety knowledge and skills. Before you start using the device, please read through this guide carefully and make sure all applicable requirements are met to avoid danger and loss of property.

Storage, Transportation, and Use

- ☐ Store or use the device in a proper environment that meets environmental requirements, including and not limited to, temperature, humidity, dust, corrosive gases, electromagnetic radiation, etc.
- ☐ Make sure the device is securely installed or placed on a flat surface to prevent falling.
- ☐ Unless otherwise specified, do not stack devices.
- ☐ Ensure good ventilation in the operating environment. Discover the vents on the device. Allow adequate space for ventilation.
- ☐ Protect the device from liquid of any kind.
- ☐ Make sure the power supply provides a stable voltage that meets the power requirements of the device. Make sure the power supply's output does not exceed the total maximum power of all the connected devices.
- ☐ Verify that the device is properly installed before connecting it to power.
- ☐ Do not remove the seal from the device body without consulting Uniview first. Do not attempt to service the product yourself. Contact a trained professional for maintenance.
- ☐ Always disconnect the device from power before attempting to move the device.
- ☐ Take proper waterproof measures in accordance with requirements before using the device outdoors.

Power Requirements



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd. Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in

Website : www.speedtechnology.in

- ☐ Install and use the device in strict accordance with your local electrical safety regulations.
- ☐ Use a UL certified power supply that meets LPS requirements if an adapter is used.
- ☐ Use the recommended cords (power cord) in accordance with the specified ratings.
- ☐ Only use the power adapter supplied with your device.
- ☐ Use a mains socket outlet with a protective earthing (grounding) connection.
- ☐ Ground your device properly if the device is intended to be grounded.

Battery Safety

Please use batteries properly; otherwise, there is a risk of fire or explosion.

- ☐ Warning: Using incorrect battery models can lead to explosion.
- ☐ If you need to replace the battery, it is recommended that you go to an authorized service center or have it replaced under professional supervision. We shall not be held responsible for any issues arising from unauthorized battery replacement.
- ☐ When replacing the battery, be sure to use a battery of the same type as the original! Using the wrong model for replacement (such as certain types of lithium batteries) may cause safety protection to fail.
- ☐ Batteries must not be exposed to overheat environments such as sunlight, fire, as this may lead to fire, explosion, or combustion.
- ☐ Do not dispose of batteries in fire or heating appliances. Do not squeeze, bend, or cut batteries, as it may cause explosion.
- ☐ Do not expose batteries to extremely high or low temperatures, or to very pressure environments, as this may cause explosion or leakage of flammable liquid/gas.
- ☐ Dispose of the used battery according to your local regulations or the battery manufacturer's instructions.
- ☐ For products or the included remote control containing a button cell battery: Do not ingest the battery - chemical burn hazard! If swallowed, a button cell battery can cause severe internal burns within 2 hours and may be fatal. Precautions (including but not limited to):
 - ☐ Keep new and used batteries away from children.
 - ☐ Stop using the product and keep it away from children if the battery compartment is not securely closed.
 - ☐ If you suspect that a battery may have been swallowed or inserted into any part of the body, seek immediate medical attention.

Network Security

Please take all necessary measures to enhance network security for your device.

The following are necessary measures for the network security of your device:

- ☐ **Change default password and set strong password:** are strongly recommended to change the default password after your first login and set a strong password of at least 8 characters including all three elements: digits, letters and special characters.
 - ☐ Do not include the account name or the reverse of the account name.
 - ☐ Avoid using consecutive characters, such as 123, abc, etc.
 - ☐ Do not use overlapping characters, such as aaaa, etc.
- ☐ **Keep firmware up to date:** is recommended that your device is always upgraded to the latest version for the latest functions and better security. Visit Uniview's official website or contact your local dealer for the latest firmware.

The following are recommendations for enhancing network security of your device:

- ☐ **Change password regularly:** Change your device password on a regular basis and keep the password safe. Make sure only the authorized user can log in to the device.
- ☐ **Enable HTTPS/SSL:** Use SSL certificate to encrypt HTTP communications and ensure data security.
- ☐ **Enable IP address filtering:** Allow access only from the specified IP addresses.
- ☐ **Minimum port mapping:** Configure your router or firewall to open a minimum set of ports to the WAN and keep only the necessary port mappings. Never set the device as the DMZ host or configure a full cone NAT.



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd. Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in

Website : www.speedtechnology.in

- ☐ **Disable the automatic login and save password features.** If multiple users have access to your computer, it is recommended that you disable these features to prevent unauthorized access.
- ☐ **Choose username and password discreetly.** Avoid using the username and password of your social media, bank, email account, etc as the username and password of your device, in case your social media, bank and email account information is leaked.
- ☐ **Restrict user permissions.** If more than one user needs access to your system, make sure each user is granted only the necessary permissions.
- ☐ **Disable UPnP.** When UPnP is enabled, the router will automatically map internal ports, and the system will automatically forward port data, which results in the risks of data leakage. Therefore, it is recommended to disable UPnP if HTTP and TCP port mapping have been enabled manually on your router.
- ☐ **Multicast.** Multicast is intended to transmit video to multiple devices. If you do not use this function, it is recommended you disable multicast on your network.
- ☐ **Check logs.** Check your device logs regularly to detect unauthorized access or abnormal operations.
- ☐ **Isolate video surveillance networks.** Isolating your video surveillance network with other service networks helps prevent unauthorized access to devices in your security system from other service networks.
- ☐ **Physical protection.** Keep the device in a locked room or cabinet to prevent unauthorized physical access.
- ☐ **SNMP.** Disable SNMP if you do not use it. If you do use it, then SNMPv3 is recommended.

Learn More

You may also obtain security information under Security Response Center at Uniview's official website.

Avertissement de l'utilisation de la batterie

- ☐ Lorsque utiliser la batterie, évitez:
 - ☐ Température et pression d'air extrêmement élevées ou basses pendant l'utilisation, le stockage et le transport
 - ☐ Remplacement de la batterie.
- ☐ Utilisez la batterie correctement. Mauvaise utilisation de la batterie comme celles mentionnées ici, peut entraîner des risques d'incendie, d'explosion ou de fuite liquide de gaz inflammables.
 - ☐ Remplacer la batterie par un type incorrect;
 - ☐ Disposer d'une batterie dans le feu ou un four chaud, écraser mécaniquement ou couper la batterie;
- ☐ Disposer la batterie utilisée conformément à vos règlements locaux ou aux instructions du fabricant de la batterie.

Regulatory Compliance

FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Visit https://global.uniview.com/Support/Download_Center/Product_Installation/Declaration/ for SDoC.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

LVD/EMC Directive



This product complies with the European Low Voltage Directive 2014/35/EU and EMC Directive 2014/30/EU.

WEEE Directive 2012/19/EU



The product this manual refers to is covered by the Waste Electrical & Electronic Equipment (WEEE) Directive and must be disposed of in a responsible manner.

Battery Regulation (EU) 2023/1542



Battery in the product complies with the European Battery Regulation 2023/1542. For proper recycling, return the battery to your supplier or to a designated collection point.

1 Indicators

LED	Status	Description
PWR(Power)	Steady on	Connected to power.
RUN(Operation)	Steady on	Normal.
	Blinking	Starting up.
IR	Steady on	Activated for remote control.
	Blinking	Authenticating device code.
ALM(Alarm)	Steady on	Device alarm occurred.
NET(Network)	Steady on	Connected to network.
GUARD(Arming)	Steady on	Arming is enabled.
CLOUD	Steady on	Connected to cloud.
HD(Hard disk)	Steady on	No disk; or disk is abnormal.
	Blinking	Reading or writing data.
HDn(Hard disk)	Steady green	Normal.
	Blinking green	Reading or writing data.
	Steady red	Abnormal.
	Blinking red	Rebuilding array.

2 Interfaces

The following part shows the interfaces of two typical models.



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd.Office : U-9, Kuber Complex, Dr. Yagnik Road,


Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in


Website : www.speedtechnology.in

 Figure 21 Model 1

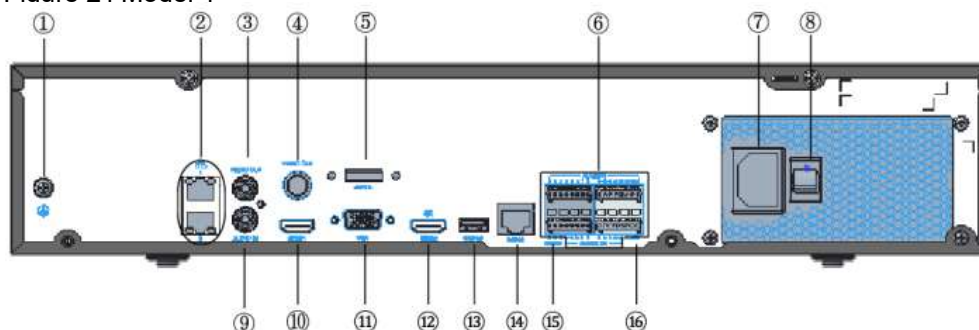

Interface	Description	Interface	Description
①	Grounding	②	Network
③	Audio out	④	CVBS output
⑤	eSATA interface	⑥	Alarm input/output
⑦	AC power	⑧	Power on/off
⑨	Audioin	⑩	HDMI 1 output
⑪	VGA output	⑫	HDMI 2 output
⑬	USB	⑭	RS232
⑮	RS485	⑯	12VDC output

 Figure 22 Model 2

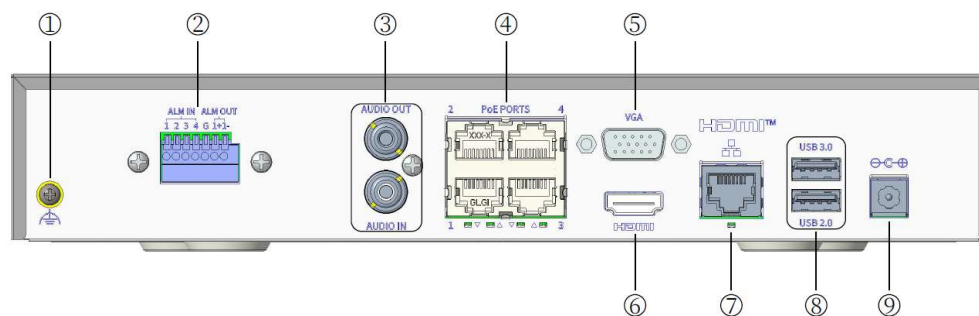

Interface	Description	Interface	Description
①	Grounding	②	Alarm input/output
③	Audioin/out	④	PoE ports
⑤	VGA output	⑥	HDMI output
⑦	Network	⑧	USB
⑨	DC power	⑩	-



3 Disk Installation

The illustrations are for reference only. The actual device may vary.

3.1 Preparation

- ☐ Prepare a #1 or #2 Philips screwdriver, a pair of antistatic gloves or a wrist strap.
- ☐ Disconnect power before installation



CAUTION!

For NVRs supports the face library function the function may be unavailable if there are no disks in slot 1 and slot 2.

3.2 1 or 2 HDD Installation

1. Loosen the screws on the rear panel and side panel and remove the upper cover.


Figure 31 Rear Panel




Figure 32 Side Panel



 2. Insert the screws into the disk and tighten the screws halfway.

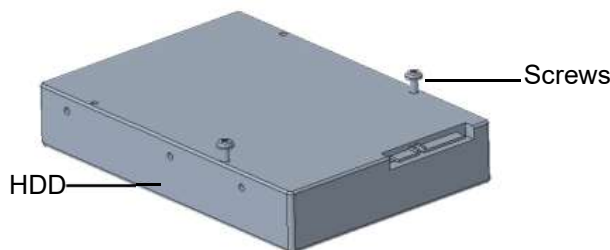

 3. Slide the disk in place from A to B, and fix the screws to secure the hard disk

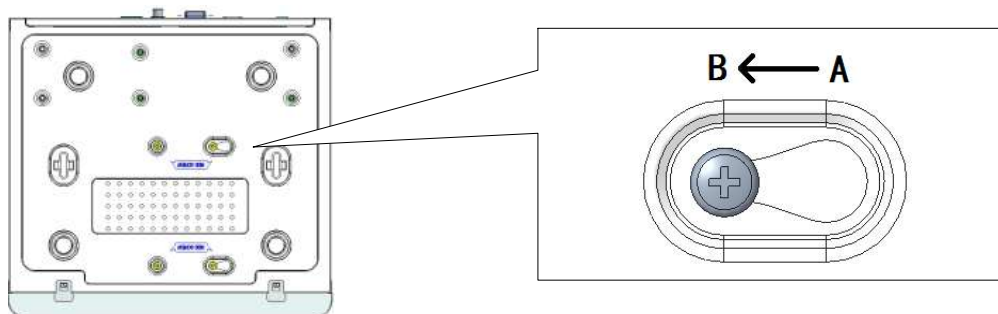

4. Connect the power cables and data cables.
5. Put the cover back in place and tighten the four screws.

3.3 4/8/9 HDD Installation

3.3.1 Remove Upper Cover

1. Loosen the screws on the upper cover.



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd. Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

E-mail : info@speedtechnology.in

Website : www.speedtechnology.in



 
2. Slide the upper cover backward, then lift it up to remove the cover.



3.3.2 Install Disks

Model A

1. Loosen the screws of the mounting plate on the side panels

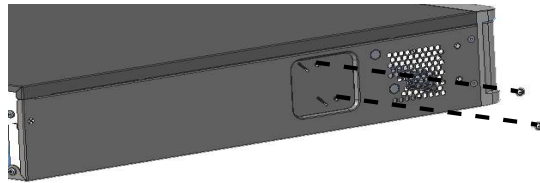

2. For the 4-HDD device, turn the upper mounting plate in the shown direction and remove the plate. For the 8 or 9-HDD device, repeat the steps to remove the upper mounting plate, and then remove the lower mounting plate.



3. Mount the disks on the mounting plate.

 
☐ 4/8 HDD

Secure the disks on the mounting plate with the screws according to the figure below. Avoid damaging the disk in the process.




☐ DD


- (1) Fasten the disk to the disk bracket with four screws.

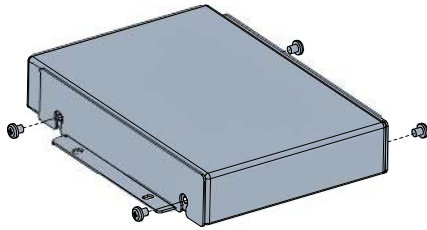

 (2) Mount the ninth hard disk on the top of the motherboard inside the case.

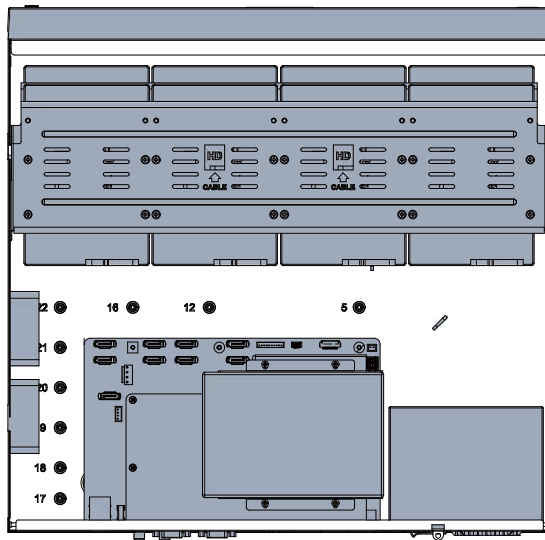

 4. Put the mounting plate back in place. Connect the power cables and data cables as shown in the figure. Repeat the steps to connect the disks.

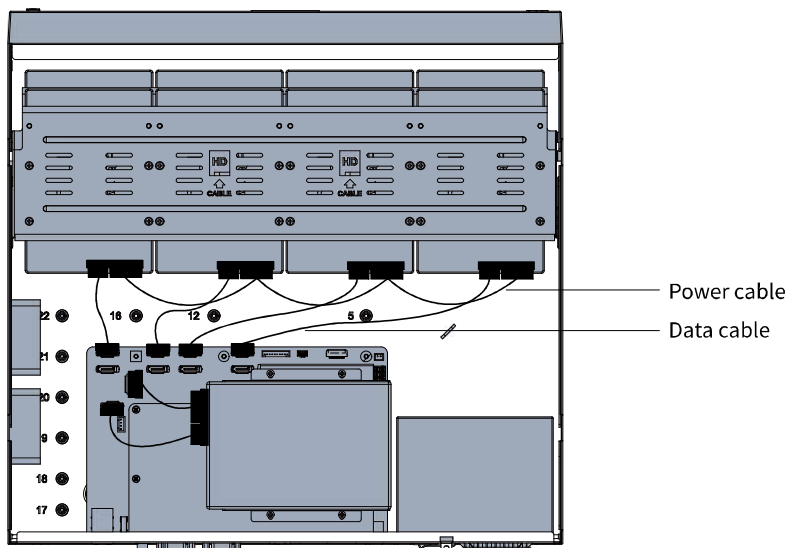

NOTE!

Please use the shortest hard disk data cable to connect the hard disk in slot 9 for easy installation.



SPEED TECHNOLOGY
An ISO 9001 : 2015 Certified Company

Regd. Office : U-9, Kuber Complex, Dr. Yagnik Road,

Rajkot - 360 001 (INDIA)

Phone : +91 98242 99869 / 89808 02072

 
E-mail : info@speedtechnology.in

Website : www.speedtechnology.in


5. Put the cover back in place, and secure it and the mounting plates with screws.

Model B


1. Fasten the disks to the brackets.

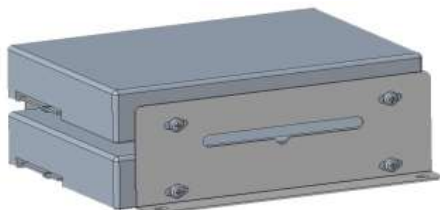

 2. Fasten the brackets installed with hard disks to the device.

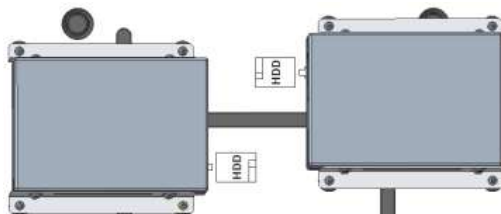

 3. Connect the power cables and data cables

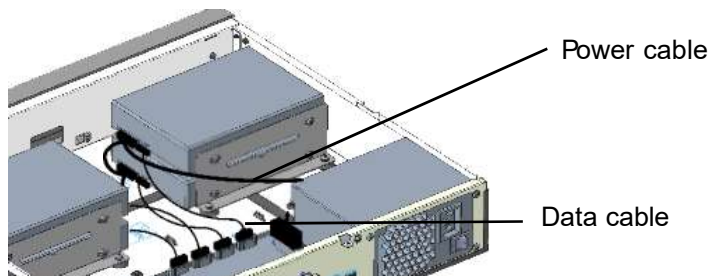

3.4 8 or 16 HDD Installation

1. Fix the mounting brackets to the disk with screws. With the disk interface side down, install the R (for right) and L (for left) bracket according to the figure below.



Down

2. Remove the front panel

☐ For front panel with buttons, press the buttons on both sides of the front panel.

 


☐ For front panel with screws, loosen the screws on the front panel.





3. Align the disk with the slot and slide the disk inward gently until it clicks. Repeat the steps to install all the disks.

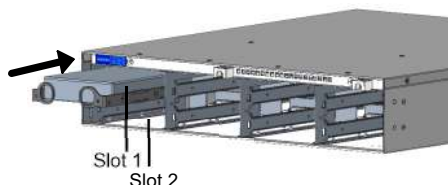

4. Install the front panel.

4 Startup

Make sure the cables are connected correctly and the device is grounded properly. Use a power supply that meets requirements.

Connect the device to power to start the device. If the device has a power switch on the rear panel, you need to turn on the power switch to start the device.

When the device is on and still connected to power, some devices require a second press of the front panel button to power on, while others can be turned on with a short press.

If the device has no power button on the front panel, or if the device does not start up after you press the power button, you need to reconnect the power to turn on the device.



NOTE!

For some devices, the power button on the front panel is only used to turn off the device.

5 Download App

Scan the QR code below to download and install the app.



NOTE!

For detailed instructions, refer to the user manual of the app.

6 Web Login

Default IP address:

192.168.1.30

Default

username/password:

admin/123456

Note:

For security, please set a strong password of at least nine characters including uppercase and lowercase letters, digits, and special characters. You are strongly recommended to regularly change the device password and keep it secure to ensure that only authorized users can log in.